



Dance Tiles:

HOW TO FIX THE
VINYL TOPS



WHY DID MY TILES SHIFT?

Sometimes the wood-look top layer of the dance tiles may shift. This is not a manufacturing defect and you can easily fix it in a matter of minutes.

Here is an example of what the shifting might look like:



A pressure-sensitive adhesive attaches the wood-look top layer to the plastic base of the tile. If the tiles get hot, the pressure-sensitive adhesive can heat up and loosen, and the top layer can shift when you walk or dance over it.


This top layer can also move on its own over time as repeated quick foot movements push it in different directions.

To fix this, you just need to remove the entire top layer from the base of the tile and reposition it.

01

Pull Up Vinyl & Remove

Gently pull up on the wood-look surface to remove it from the tile base.

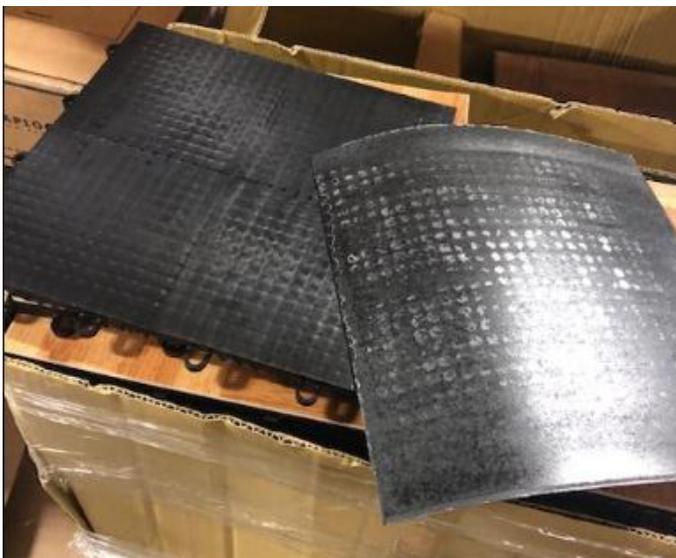

Completely removed:

You'll see that there is still adhesive on the back of the layer you just removed. That means you can reposition it back onto the base of the tile.

02 Line Up & Place

Carefully line up the corners and edges of the vinyl wood-look top to the tile base underneath, and stick it back into place. Since the adhesive is pressure-sensitive, we suggest you walk on the tile or use a rolling pin to apply pressure that bonds the top to the tile base.

End Result



Have More Questions? Contact Us:

Phone: (800) 613-0996 | Email: contact@incstores.com